

nuZeo 8w

Safety instructions

Disposal instructions

Technical Specifications

Warranty Terms



If you have any questions or encounter any problems whilst setting up your Nubert system, please feel free to contact our service team at. Please have your customer number to hand.

Telephone: +49 (0)7171 87120
Email: info@nubert.de



nubert®

Equipment approval and conformity in accordance with EC Directives

Nubert electronic GmbH hereby declares that this product complies with Directive 2014/53/EU, provided it is installed and used in accordance with the manufacturer's instructions.

The full text of the EU Declaration of Conformity is available at the following web address:

<https://www.nubert.de/en/declaration-of-conformity>

- The serial number on the loudspeaker must not be altered. It forms part of the type approval. If the loudspeaker is repaired or modified by workshops not authorised by Nubert or by any other third party, it will lose its type approval.
- Only accessories and devices that themselves comply with all legal requirements and are approved may be connected.
- The loudspeaker must only be used for the applications specified in the section 'Intended Use'.

Intended use

This loudspeaker is intended solely for sound reproduction in dry rooms. Only use the loudspeaker as described in this user manual. Any other use (particularly safety-related or medical applications, or outdoor installation, such as with specially IP-rated products) is considered improper and may result in damage to property or even personal injury. Nubert electronic GmbH accepts no liability whatsoever for damage caused by improper use.

Safety instructions

Before connecting and commissioning the device, you must read the user manual in full, paying particular attention to the safety instructions. For your own safety, it is essential that you observe all warnings and safety instructions contained in this user manual and on the loudspeaker. The user must not carry out any work on the loudspeaker other than the procedures described. Keep this document in a safe place so that you can access it at any time. It must also be passed on to any subsequent owners.

Key to symbols



The triangular symbol with an exclamation mark (without any additional text) indicates important information regarding the commissioning, operation and maintenance of the device.

The word '**Caution!**' next to the triangular symbol indicates a medium level of risk. Failure to heed this warning may result in damage to property.

The word '**Danger!**' next to the triangular symbol indicates a high level of risk. Failure to heed the warning may result in injury or death.



This symbol indicates that you must read and follow the user manual and the safety and warning instructions before operating the appliance.



This symbol (a triangle with a lightning bolt) warns of dangerous voltages inside the housing and of the risk of electric shock.



Devices bearing this symbol must only be used indoors in a dry environment.



Appliances and batteries marked with the crossed-out wheeled bin symbol must not be disposed of with household waste. Please also refer to the disposal instructions at, from page 5 onwards.

General information

 Never leave the speaker switched on without supervision!

Risk of electric shock!

To avoid the risk of electric shock, the speaker must not be opened by the user. There are no parts inside the speaker that require maintenance by the user. Servicing and repairs must only be carried out by qualified technicians authorised by Nubert. If you require servicing, please contact Nubert electronic GmbH (info@nubert.de) directly!

Risk of suffocation!

Never allow children to use the speaker or the remote control without supervision, or to play with the packaging! There is a risk that children could become entangled in the packaging film and suffocate. Ensure that children cannot remove any small parts from the devices! These parts, as well as the remote control's battery, could be swallowed and cause suffocation. If any parts are swallowed, contact a doctor immediately!

Risk of injury or damage!

If you move the speaker, please do so with due care to avoid injury and damage!

Attention!

As the loudspeaker can only be completely disconnected from the mains via the mains socket on the rear of the unit or by removing the mains plug from the socket, it must be positioned so that you have unrestricted access to the mains socket or the mains plug. If any of the following situations apply, switch off the loudspeaker immediately and disconnect it from the mains. Contact Nubert electronic GmbH (info@nubert.de) straight away!

- The speaker has been damaged or has fallen over
- The power cable or mains plug is damaged
- Objects or liquid have got into the speaker
- The loudspeaker was/is exposed to excessive damp or rain
- The speaker is not working properly or is showing a significant drop in performance
- The speaker smells of burning, is emitting smoke or is making unusual noises.

 Please use only accessories recommended by Nubert!

Installation instructions

Attention!

An unstable installation site may result in damage to the loudspeaker.

- Only place the speaker on a flat, stable surface and make sure it cannot be knocked over!
- Please also ensure that the cables cannot be pulled accidentally, to prevent the speaker from being knocked over or the connection sockets from being damaged!
- Keep the speaker away from strong mechanical shocks!

Attention!

Excessive heat build-up inside the appliance may shorten its service life or cause a fire.

- Never cover the back of the speaker! Ensure that there is a clear space of at least 10 cm at the back and that there is sufficient air circulation!
- Do not use the speaker near heat sources such as radiators or stoves!
- Do not expose the speaker to direct sunlight!
- Never place lit candles or similar open sources of flame on top of the speaker!

Risk of explosion!

Placing the equipment in unsuitable locations may cause explosions.

Do not use the loudspeaker

- in environments where there is a risk of fire or explosion!
- at extremely low or extremely high temperatures!
- near flammable gases or vapours!
- near areas with heavy dust!
- near highly flammable materials!

Risk of electric shock!

The loudspeaker carries mains voltage internally and, in certain areas, voltages exceeding 35 V AC or DC. It does not have any special protection

against the ingress of liquids or objects into the system.

There is therefore a risk of fatal electric shock.

- Never touch the speaker with wet hands!
- Only use the speaker in a dry place!
- Do not use it outdoors or in damp rooms!
- The loudspeaker must be protected from all types of liquid, including dripping and splashing water.
- Do not place any containers holding liquids (e.g. flower vases, for example) on top of the speaker or in its immediate vicinity!
- If the speaker is moved from a cold environment into a warm room, condensation may form inside the unit. Wait at least 6 hours before switching on the speaker, until it has reached room temperature and is dry!
- Do not use the speaker during rapid temperature changes!
- No objects or foreign bodies must be allowed to enter the appliance.
- If the loudspeaker has come into contact with any liquids or if any objects have got inside it, please unplug it immediately and contact Nubert electronic GmbH (info@nubert.de)!

Risk of injury or damage!

Applies to loudspeakers with threaded sockets on the underside of the cabinet:

The threaded sockets on the underside of the housing must only be used to fit the speaker feet supplied!

They are not designed to withstand tensile loads and must therefore not be used as a mounting point for hooks or similar items to hang the box from. A falling box can cause serious injury and damage.

Connection instructions



General connection instructions

Unplug the power cable before making any changes to the system's cabling!

- Make sure that all connections have been made correctly and that all plugs are firmly inserted into the sockets before connecting the speaker to the mains!
- Only use the cables or connectors provided for the connections! Failure to do so may result in damage or malfunction.
- If you want to disconnect any connections from the speaker, always pull on the plug – never on the cable!
- Make sure all plugs are firmly inserted into their sockets!
- Please use only cables and accessories recommended by Nubert!



Risk of electric shock!

Faulty mains supply systems or excessive mains voltage can result in electric shocks.

- All mains power supply or aerial systems connected to the loudspeaker must comply with the applicable legal requirements and regulations and must be installed correctly by an authorised installation contractor.
- Only use the supplied mains lead to connect the speaker. Under no circumstances should the mains lead or its plug be modified.
- Please ensure that the mains voltage at your location matches the speaker's requirements! The correct mains voltage is indicated on the label on the back of the speaker. It must not be connected to any other power supply.
- Class 1 equipment must be connected to the protective conductor of the electrical installation, which is at earth potential. Ensure that the protective conductor installation is correctly fitted at the connection point!
- When laying the power cables, ensure that they cannot be damaged (for example, by heat or mechanical stress)! Pay particular attention to the areas around the plugs and distribution boxes!



Attention!

Power surges in the mains supply (such as those caused by a lightning strike) can damage or destroy the device and its power supply unit.

- A surge protection device can provide a degree of protection against excessively high voltages in the mains supply.
- However, the best possible protection against damage can only be achieved by completely disconnecting your equipment from the mains and the aerial systems. Therefore, during a thunderstorm or if there is a risk of lightning, unplug the mains cable from the socket and disconnect any aerial connectors from your hi-fi system!
- If the speaker is not going to be used for a prolonged period or is left unattended, the power supply should be disconnected. Unplug the power lead from the socket!

Disposal of electrical and electronic devices

Information according to the German Act on Electrical and Electronic Devices (ElektroG)

Owners of waste electrical and electronic devices must dispose of it separately from unsorted municipal waste.

Meaning of the symbol „crossed-out trash can“



The crossed-out garbage can symbol regularly displayed on electrical and electronic equipment and batteries indicates that the respective device must be collected separately from unsorted municipal waste.

Batteries, accumulators and lamps

Spent batteries and accumulators that are not enclosed by the waste equipment, as well as lamps that can be non-destructively removed from the waste equipment, have to be separated from the waste equipment before handing it in at a collection point.

If the waste equipment is to be prepared for reuse with the participation of a public waste management authority, batteries and accumulators as well as lamps do not have to be removed.

For the disposal of batteries and accumulators, please also observe the following information on the battery law.

Deletion of data

Old devices may contain personal data. In your own interest, please note that you, as the end user, are responsible for deleting the personal data on the old devices to be disposed of before handing them in.

Options for the return of old devices

Owners of old devices from private households can hand them in free of charge at the local collection points of the public waste disposal authorities or at the collection points set up by manufacturers or distributors.

Distributors of electrical and electronic devices are obligated to take back old devices free of charge in accordance with § 17 Sections 1 and 2 of the Electrical and Electronic Equipment Act (ElektroG). The take-back process is as follows:

Distributors with a sales area of at least 400 m² for electrical and electronic equipment and distributors of groceries with a total sales area of at least 800 m² who offer electrical and electronic equipment several times per calendar year or on a permanent basis and make it available on the market are subject to the obligation to take the devices back. This applies in the case of distribution using means of distance selling (e.g. online retailers), with the stipulation that the relevant floorspace depends on the storage and shipping areas for electrical and electronic equipment.

Distributors subject to the take-back obligation must,

- when supplying a new electric or electronic device to an end-user, take back free of charge an end-user's old device of the same type that fulfills essentially the same functions as the new device at the place of supply or in the immediate vicinity thereof. If the device is delivered to a private household, the consumer may demand the collection of the old device at that location.

In the case of distribution using means of distance selling (e.g. online store), free collection is limited to electrical and electronic equipment in categories 1, 2 and 4, namely "heat exchanger", "Screens, monitors and devices containing screens with a surface area greater than 100 square centimeters" or "large equipment" (the latter with at least one external dimension over 50 centimeters). For equipment in categories 3, 5 and 6, the distributor must ensure suitable return options within a

reasonable distance from the respective end user.

- at the request of the end user, take back free of charge at the retail outlet, or in the immediate vicinity thereof, waste equipment that does not exceed 25 cm in any external dimension; take-back must not be linked to the purchase of an electrical or electronic device and is limited to three old devices per type of device. In the case of distribution using means of distance selling, the distributor must ensure appropriate return options at a reasonable distance from the respective end user.

Care and cleaning tips



Attention!

Improper handling of the loudspeaker may result in damage.

- Always unplug the speaker before cleaning it!
- Before switching the system back on, make sure that all connections are correct, that there are no short circuits, and that the loudspeaker is completely dry.
- Under no circumstances should you use harsh cleaning agents or solvents such as petrol, methylated spirits or similar substances!

Housing

We recommend a standard window cleaner sprayed onto a cotton cloth. This will easily remove almost all fingerprints and smudges. Alternatively, you can use window cleaning foam. We advise against using microfibre cloths! These can cause tiny scratches on the surface.

Diaphragms and loudspeaker drivers

To remove dust from a loudspeaker driver, simply use a lint-free cotton cloth to gently wipe the diaphragm, applying very light pressure.

Unboxing and contents of the box

Unpacking

When unpacking your speaker, do not use any sharp or pointed objects to avoid causing damage to the casing. Please keep the packaging in a safe place in case you need to transport the speaker at a later date.

Contents of the package

If the delivery is complete, it shall consist of the following items:

- 1 nuZeo active speaker
- 4 outrigger feet
- 1 fitting kit (8 screws, 1 angle spanner)
- 1 mains lead, 3 m
- 1 signal cable, RCA plug, 3 m

Automatic switch-off

The loudspeaker has an automatic switch-off function. If either the XLR or AUX input is selected, the loudspeaker will switch to standby mode after a maximum of 20 minutes without a signal.

Note: The automatic switch-off function can be enabled or disabled via the Nubert

X-Remote app. Navigate to

> advanced

> auto power

If the **'off'** option is selected here, the function is disabled.

Automatic switch-on

The speaker's electronics feature an automatic switch-on function that automatically wakes it from standby mode as soon as an audio signal is detected. The signal must be present at the input that was selected during the automatic switch-off process.

On the other inputs, the automatic switch-on function is only active if the speaker has been put into standby mode by the automatic switch-off function. If standby mode has been activated manually by pressing the **on/off** button in the app, the automatic switch-on function is deactivated.

Operating mode

Wireless mode:

In wireless mode, this product is connected to other compatible devices via a wireless network (D83).

To connect speakers/devices (via X-Connect) in the Nubert X-Remote app to the menu item

Navigate to **> Wireless Setup** and select **> Pair**.

The wireless network is activated automatically and a connection is established with compatible devices.

In this mode, the standby power consumption is < 1.0 watts.

Standard mode:

In standard mode, the product is not connected via a wireless network (D83).

Music is played via a wired connection using AUX / XLR.

To deactivate the wireless network (X-Connect), navigate to the

> wireless setup menu item in the Nubert X-Remote app and select **> unlink**.

The wireless network is now deactivated.

In this mode, the standby power consumption is < 0.5 watts.

Service

If you have any questions or encounter any problems whilst setting up your Nubert speaker, please feel free to contact our service team:
Telephone +49 (0) 7171 8712-0 · Email: info@nubert.de

Please have your customer number to hand!

nuZeo 8w Technical Specifications

Type	active bass-reflex subwoofer	
Configuration	1 × Woofer	carbon fibre cone (ø 381 mm)
Frequency response	19 – 115 Hz @ –3 dB 18 – 135 Hz @ –6 dB	
Input sensitivity	0.3 V rms	
Max. input	2 V _{eff} (AUX) 4 V _{eff} (XLR)	
Power of the built-in amplifier	1200W Rated power 3200W Music power	
Power consumption: Standby	< 0.5 watts (standard mode) < 1.0 watts (wireless mode) For information on changing the operating mode, see page 6.	
Power consumption: Maximum	3200 W	
Bluetooth LE module: Radio frequency bands Transmit power	2402 – 2480 MHz 2.80 dBm / 1.91 mW	
Wireless network module: Radio frequency bands Transmit power	5180 – 5240 MHz, 5736 – 5818 MHz 11.58 dBm / 14.4 mW; 12.92 dBm / 19.6 mW	
Height Width Depth	75.0/80.0 cm 42.0/51.5 cm 60.0/69.5 cm (body / with Outrigger feet)	
Weight	70.3 kg	
Permissible operating temperature	5 °C – 35 °C	
Mains voltage	AC 100 – 120 V~ / AC 220 – 240 V~	
Mains frequency	50/60 Hz	

Country-specific restrictions and requirements:

Restriction	Countries
For indoor use only	BE, BG, CZ, DK, DE, EE, IE, EL, ES, FR, HR, IT, CY, LV, LT, LU, HU, MT, NL, AT, PL, PT, RO, SI, SK, FI, SE, UK

Warranty terms

Your provider and contractual partner:

Nubert electronic GmbH · Nubertstr. 1 · 73529 Schwäbisch Gmünd · Germany
 Register court AG Ulm, HRB 700296
 Phone: +49 (0)7171 8712-0 · E-Mail: info@nubert.de
 Tax ID No.: DE 16758584 · WEEE Reg. No. DE 48888173

For questions and individual advice, please dial our special number:
 +49 (0)7171 8712-0
 Our hotline is available from:
 Monday to Friday from 10:00 – 14:00 and 15:00 – 18:00.

1.1. Nubert (Nubert electronic GmbH, Nubertstr. 1, 73529 Schwäbisch Gmünd, Germany) grants a special manufacturer's warranty to the purchaser on certain products of the Nubert brand, for which we state this in the offers or in the corresponding product documents, or for which these warranty conditions are enclosed with the delivery, according to the following conditions.

For products of other manufacturers and brands that you purchase from Nubert, the legal warranty rights apply. Provided that other manufacturers grant their own warranties, claims arising from these warranties are only justified against these manufacturers, but not against Nubert.

1.2. The legal rights of the purchaser, in particular the legal right of withdrawal or the statutory warranty rights, shall remain unrestrictedly available to the purchaser in addition to the warranty and shall be available to the purchaser to the full extent. The consumer's legal rights may, of course, be utilized free of charge and are not restricted by the warranty.

1.3. The warranty period for Nubert speakers in passive technology (without built-in amplifier) is 5 years from delivery to the first purchaser. In the first two years this applies without restriction. After the second year, the warranty is limited to the functionality of the drivers, the electrical connections and electronic components (cross-over). In particular, optical changes to surfaces (e.g. foiled, painted, veneered, anodized or plastic surfaces) are no longer covered by the warranty after the second year has passed.

1.4. The warranty period for Nubert speakers in active technology (with built-in amplifier, e.g. active speakers and subwoofers), as well as electronic devices of the Nubert brand (e.g. amplifiers and active tuning modules) is 2 years from delivery to the first purchaser.

1.5. The warranty period for Nubert accessories (e.g. cables, cable accessories, stands, holders, speaker casters, speaker covers) is 5 years from the date of delivery to the first purchaser. This applies without restriction for the first two years. After the second year, the warranty is limited to the functionality of the accessories. In particular, optical changes to surfaces (e.g. painted, veneered, anodized or metal, fabric or plastic surfaces) are no longer covered by the warranty after the second year has passed.

1.6. In each case, the proof of purchase of the first purchaser is the warranty certificate.

1.7. The warranty includes and is limited to the repair or replacement of the defective part free of charge in case of a quality defect of the goods (e.g. material defect or manufacturing defect) or a replacement delivery (concurrently against return of the defective product) at our discretion. In addition, Nubert will cover the shipping and return costs of the affected product from or to the curb in the case of justified warranty claims, provided that the goods are located within the states of the European Union and the shipment has been coordinated with Nubert in advance. Additional services are possible as a gesture of goodwill at Nubert's discretion. It is assumed, that a quality defect, which becomes apparent within the warranty period was already present at the time of the transfer of perils. Replaced parts or products returned in the case of a replacement delivery become the property of Nubert. Warranty services do not result in an extension of the warranty period, nor do they initiate a new warranty period. The warranty period for installed spare parts ends with the warranty period for the entire device. The acceptance or performance of warranty services is made without acceptance of liability according to statutory warranty law.

2. A warranty claim does not apply in the event of

- repair attempts of any kind not previously agreed upon with Nubert
- improper operating environment or improper storage (e.g., damage due to moisture or particularly high or low temperatures)
- improper transport packaging (the original transport packaging, used in its entirety, provides sufficient protection)
- improper mechanical impact on the goods (e.g. damage caused by dropping, scratches and damage to housings, displays and remote controls, switches, connection sockets or antennas after delivery), especially on loudspeaker chassis (e.g. depressed membranes/domes)
- improper mounting (e.g. of switches, antennas, covers, feet or brackets) or improper connection / improper operation (e.g. operating with defective or unsuitable amplifiers or other source devices with DC voltage or unusually high ripple voltage at the source device output) as well as the effect of amplifier power on speakers outside their specification (e.g. sine power of the amplifier is far above the rated power handling of the speaker)
- individually assembled cables.

3. Do not disassemble or remove any components from our devices and loudspeakers (e.g. drivers), and do not send in such individual parts before you have contacted Nubert Service and agreed on this measure.

4. In the event of a warranty claim, the defective product must be packed together with a copy of the purchase receipt and a meaningful description of the defect into the original packaging, if possible, and sent to us (see below for address). We recommend to coordinate the return with us in order to receive the free return ticket. Returning the goods within the warranty period is sufficient to meet the deadline.

5. Address your correspondence, any returns and suggestions to:

Nubert electronic GmbH, Nubertstr. 1, 73529 Schwäbisch Gmünd (Germany), Phone: +49 (0)7171 8712-0

As of: December 02nd, 2025

Technical changes, errors and misprints reserved - Our General Terms and Conditions (GTC/AGB) can be found on our website: www.nubert.de/en/gtc



Nubert electronic GmbH
 Nubertstr. 1
 73529 Schwäbisch Gmünd
 Germany

E-Mail: info@nubert.de
 Hotline: +49 (0)7171 8712-0
www.nubert.de